


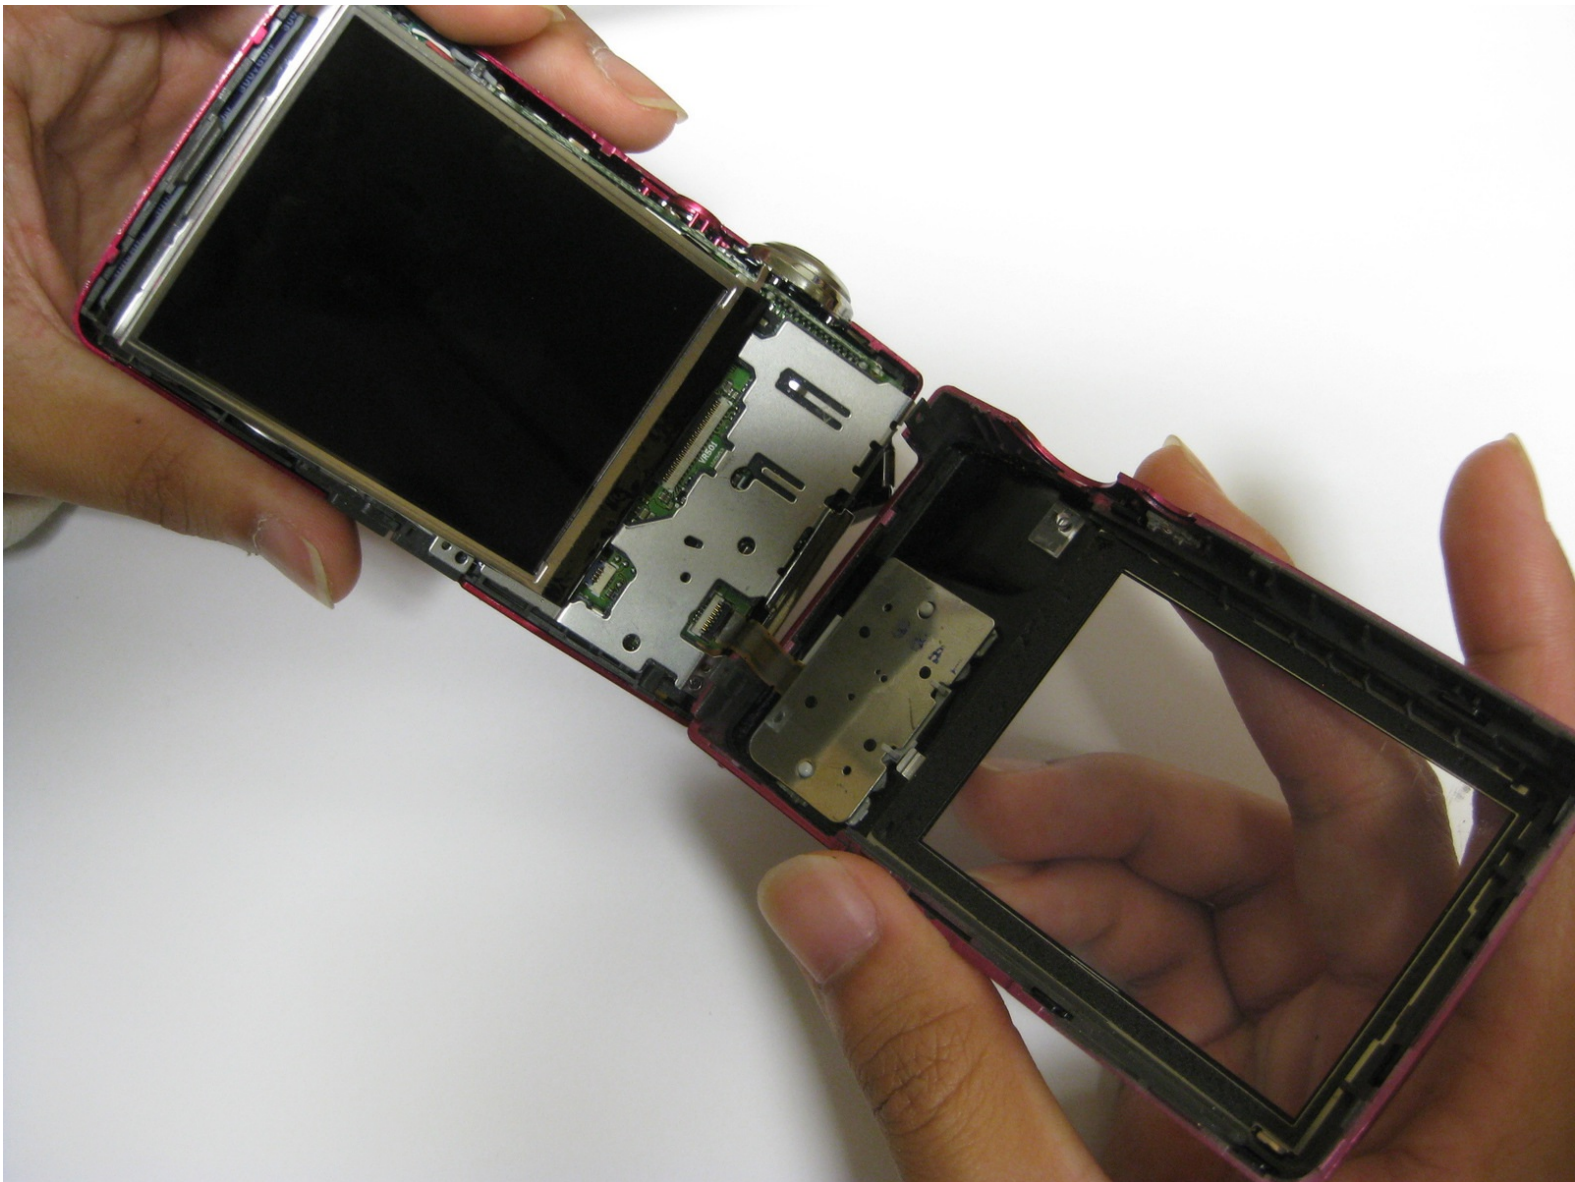

Nikon Coolpix S630 Back Cover Replacement

This guide will show you how to safely take off the back panel of your Nikon Coolpix S630.

Written By: Anna Katrina



INTRODUCTION

This guide will show you the proper steps to take apart the back metal casing from your Nikon Coolpix S639.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery Compartment




- The battery compartment is located on the bottom of the camera.
- Place your thumb on the battery door.
- Slide the door away from the camera in the direction the arrow points to.

Step 2 — Battery

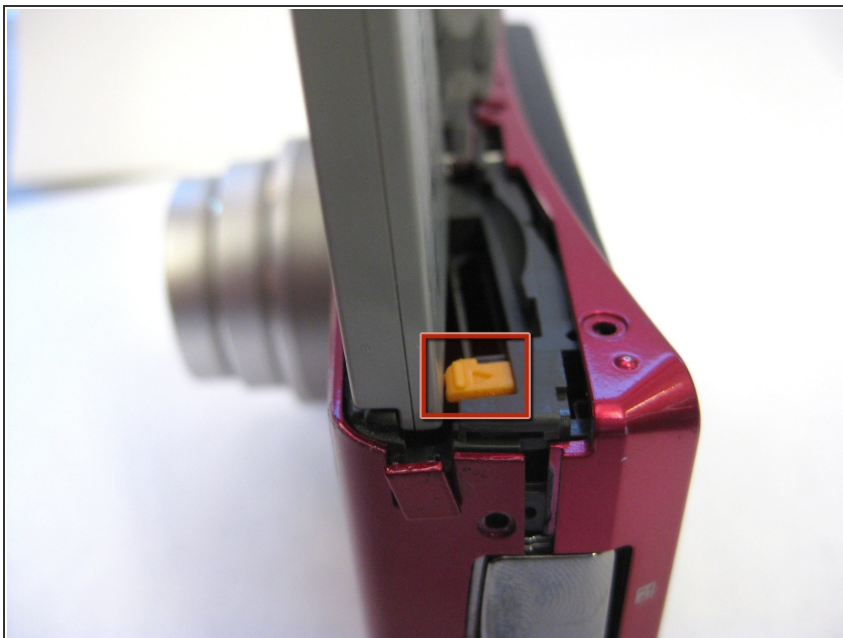

- Slide the yellow tab towards the back of the camera.
- The battery should pop out.
- Remove the battery.

Step 3 — Memory Card

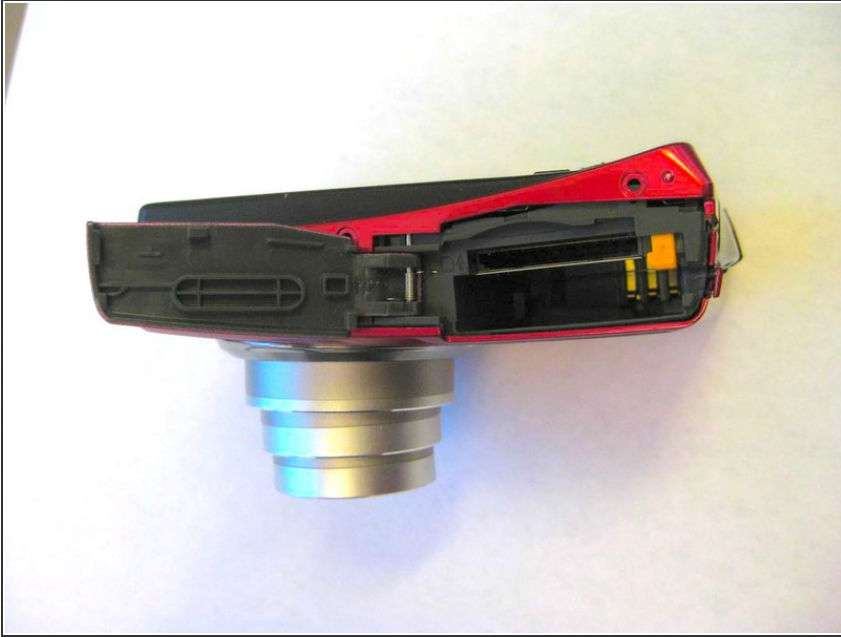


- Press the memory card down into the camera.
- The memory card should pop out.
- Remove the memory card.

Step 4 — Back Cover Removal



- Unscrew the two, 3.5mm Phillips screws from the side with the AV outlet.
- Unscrew the 3.5mm Phillips screw from the opposite side of the camera.
- Unscrew the six, 3.5mm Phillips screws from the bottom of the camera.



Step 5

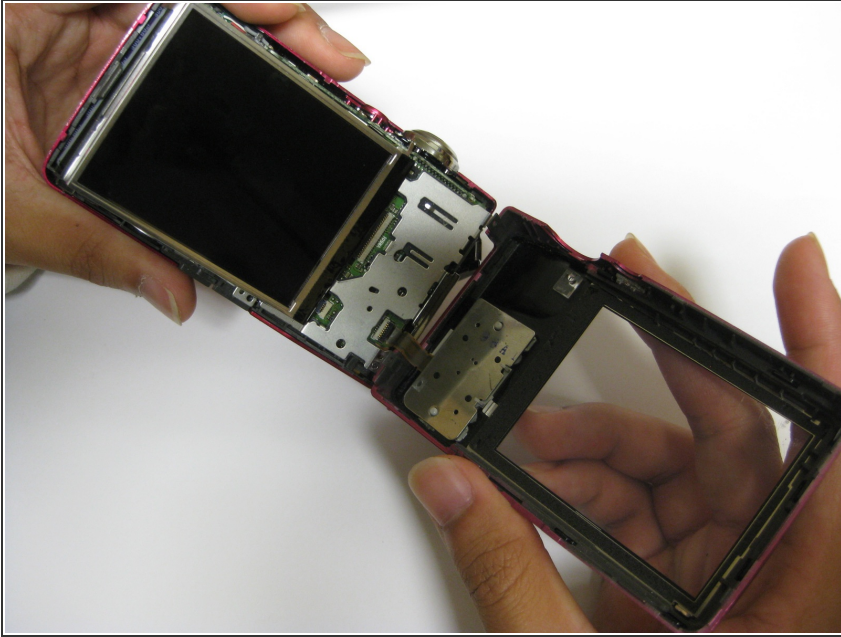

- Carefully remove the back casing from the camera.

⚠ Be mindful when removing the back casing, as there is a ribbon that still connects the back casing to the logic board.

Step 6 — Detaching Ribbon

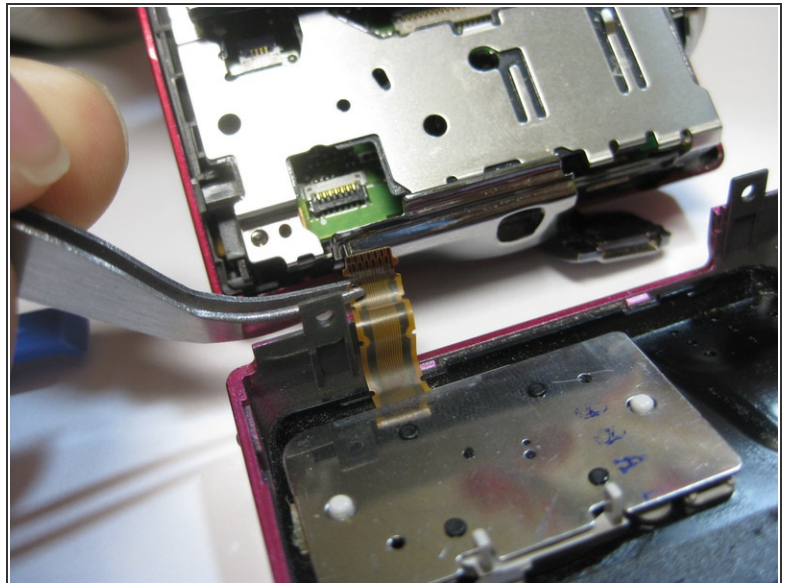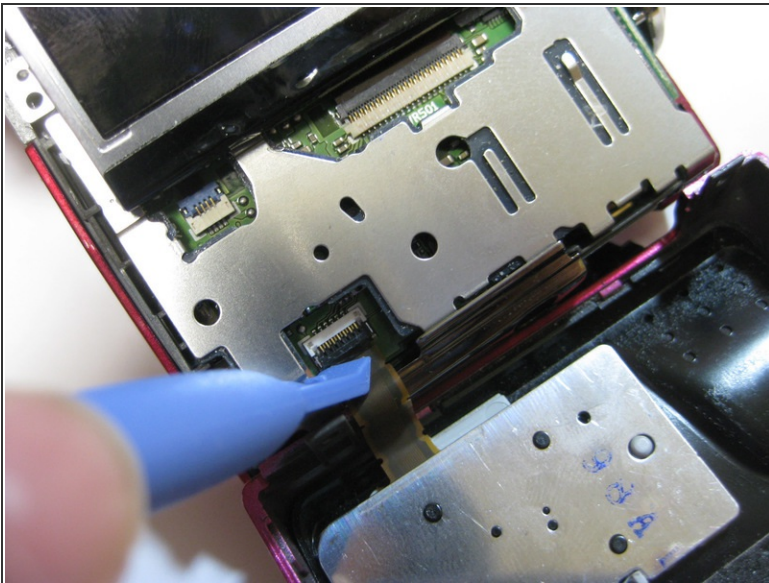

- Place the plastic opening tool underneath the ribbon tab as shown. Gently lift the tab up.
- Gently pull the ribbon from the logic board with tweezers.
- With the ribbon disconnected, the back casing should now be detached from the rest of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 06:50:33 AM.